

Installation Instructions

- Replace light source (Low Profile)



1 Tilt the light source.



2 Grasp the inside of the lamp and pull out the front.




3 Now the lamp is hanging loose.



4 Release the light source from the socket.



5 Press the light source out of the front.

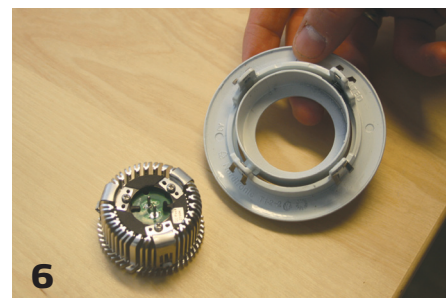

6 The light source is released and ready to be changed.